



## Foot Switch Troubleshooting

Has the foot switch on your Power Drain Cleaner become deflated and no longer works properly? Never fear, there is an easy fix!

- Shut down the Machine. Disconnect from power source.
- Wear proper protection including goggles and gloves.
- Find where the air hose on the foot switch meets the Power Drain Cleaner machine.
- Turn the nut counterclockwise to loosen.
- Slide the nut down the air hose, making sure to keep it secure so that it doesn't get lost.
- Gently but firmly unplug the air hose from the machine, pulling straight out to avoid damaging the hose or the connection.
- You should notice the foot pedal immediately re-inflate. You may leave the air hose unplugged for several minutes if it does not work immediately.
- Once the foot pedal has re-inflated, simply plug the air hose back into the machine in the same spot, taking care to ensure a solid connection.
- Slide the nut back up the air hose and turn it clockwise to screw back into place.
- Repeat these steps as often as needed to keep your foot pedal working like new.

Please check out our video for demonstration.

If you have more questions or need further assistance, please do not return the machine to store. Please contact us first at (973)-287-6458, or email to [sales@rticorporation.com](mailto:sales@rticorporation.com).